


Idle Free Systems – Quick Start Guide

Bunk Heat

1. Turn the thermostat to HEAT. This will turn on the water heater.
*If you are working on a Kenworth truck, move the Kenworth temperature control rocker switch to the MAX HEAT position.
2. Use the truck's bunk control panel to control the fan speed and the bunk temperature.

Cab Heat

1. Turn the thermostat to HEAT.
2. Turn the ignition key to the accessory position.
3. Use the dash control panel to regulate the heat.
*The truck batteries are used to power the blower fan.

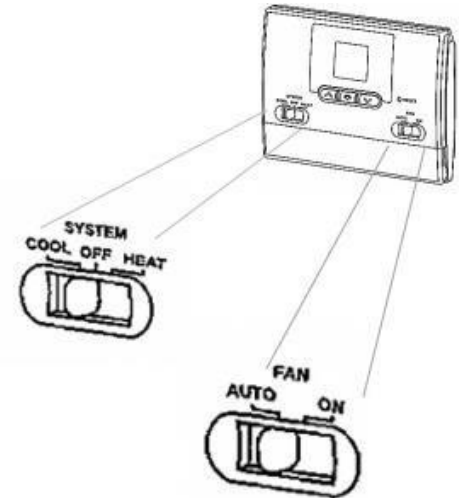

Engine Pre-Heat

1. Turn the thermostat to HEAT.

Air Conditioning

1. Turn the thermostat to COOL.
2. Set the desired temperature.
*The evaporator fan can be set to go on and off with the temperature controls (AUTO), or it can be set to ON all the time if you toggle the switch to the ON position.

Shore Power

1. Plug the extension cord into the power inlet located below the side door on the driver's side of the truck.

Notes

1. The air conditioner will go off when the truck is running or when the ignition key is in the ON position.
2. The inverter does not need to be turned on for any heat function (cab or bunk).
3. Turn the thermostat to the OFF position when you leave the bunk.
4. The inverter may shut off or overload if you use a microwave that exceeds the maximum output rating of the inverter (greater than 700 watts). Microwave ratings are based on run watts, not the number of watts needed to start the microwave. Idle Free Systems cannot control what drivers plug into the inverter. Use caution when plugging in electric appliances.