


Kit # 51021

Compressor Top Bracket & Feet Replacement Installation Instructions


Compressor Top

1. Remove the broken compressor's top bracket.
2. Remove the existing support bracket hardware between the rubber side mount and the compressor bracket.
3. Install the new angled bracket between the rubber side mount and the compressor.
4. Open T-bolt clamp and surround the compressor top with the T-bolt clamp.
5. Place the T-bolt nut over the newly installed bracket. Then locate the nut squarely over the portion of the new bracket where it reaches the compressor.
6. Tighten down the T-clamp nut to 70 inch-pounds.

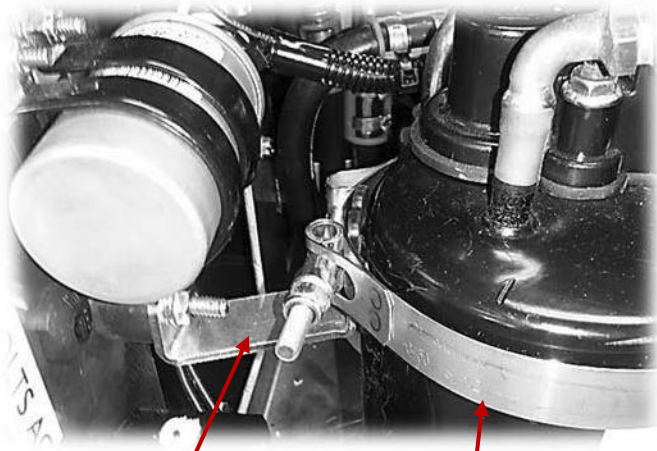

**New Angle Bracket
Part # 31021**

**T-bolt Clamp
Part #31018**

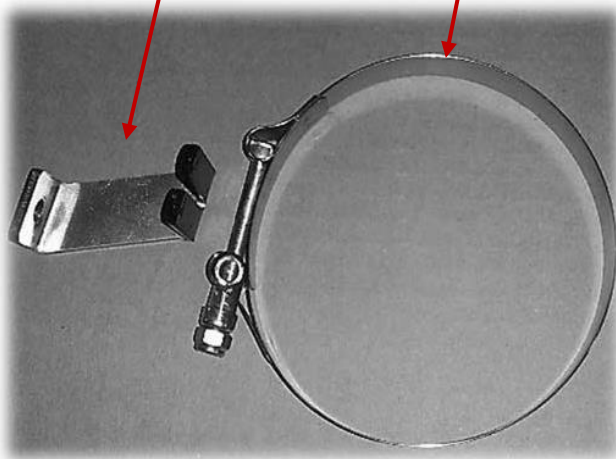

If the capacitor or the compressor wiring is removed, use the diagram below to ensure that the wires are re-connected properly

