

# Idle Free System Harness Wiring


## **NOTICE: New Installation Requirement**

**New wire harness from UBB to APU required for Condenser Fan Operation.**

### **Wire Connection Location:**

There is a new single **ORANGE** wire that is part of the Ignition harness. It is plugged into the UBB Ignition port that needs to be routed down to the back of the APU.

Please see images below.

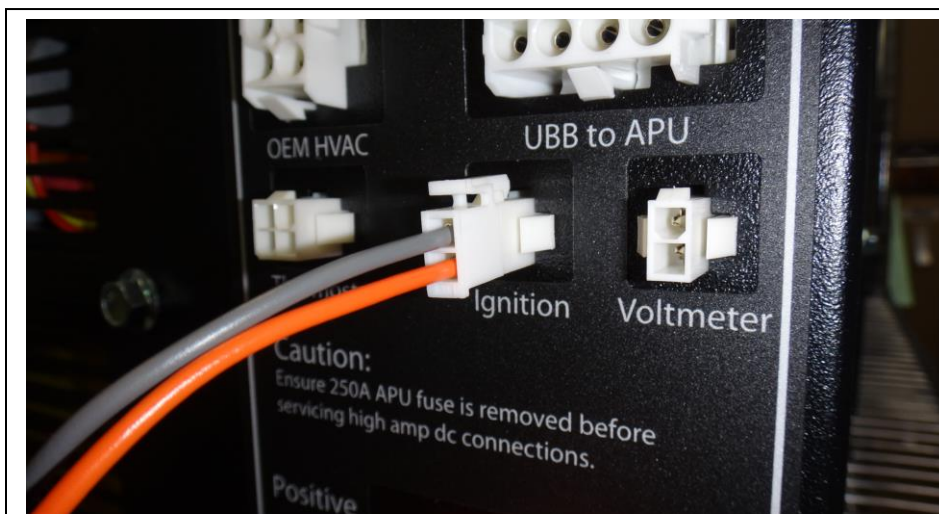


**UBB** : Insert new harness into the Ignition port.

Note: this new harness has two wires **Orange** and **Gray**.

The **Orange** Wire goes to the APU.

The **Gray** wire goes to the truck ignition

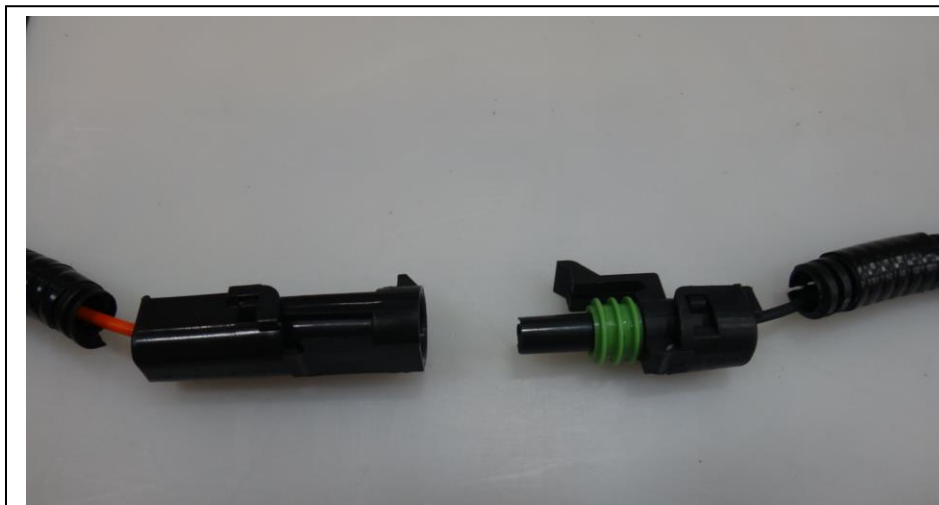

**APU**: Insert new **Orange** wire into the single **Black** wire terminal.

This is located on the back of the APU.