


Idle Free Systems Update to Harness

Battery Fuse:

To improve product safety there is a new battery fuse required to be installed between the APU battery bank and the Reefer Link.

Your installation will depend on the battery configuration, please see the suitable instructions below.

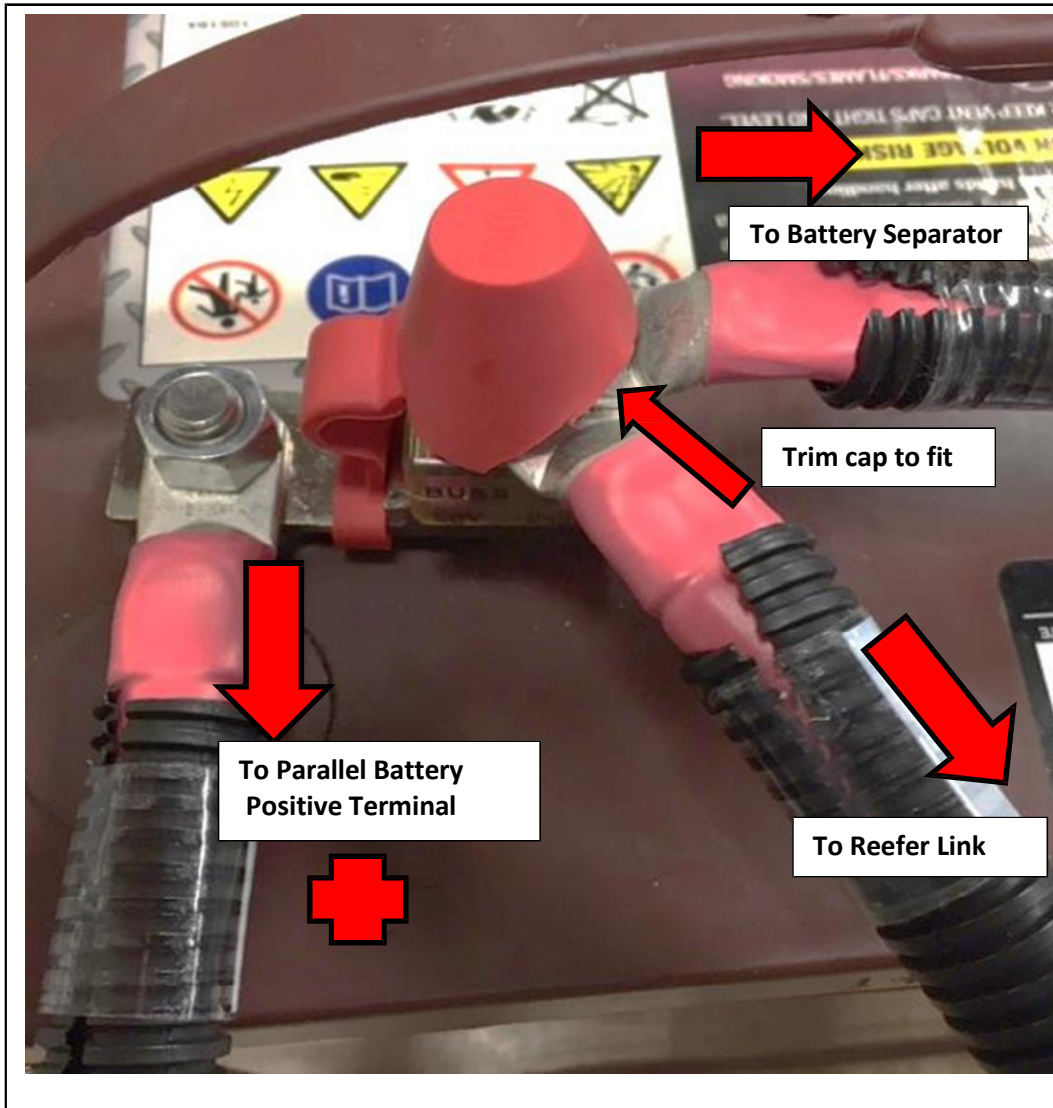

1. Remove the battery negative cable. Place the pre-assembled fuse assembly on the positive battery terminal.
2. Place the **Reefer Link** cable on **Top** of the **battery fuse**. (Torque 106 in-lbs.)
3. The parallel battery connection cable should connect directly to the battery terminal on top of the fuse holder tang. (Torque 120-180 in-lbs.)
4. Trim cap cover to fit securely on top of fuse holder stud.
5. Reconnect the battery negative cable.