





## Condenser Fan 3.7 Field Repair Guide

## Condenser Fan 3.7 Field Repair Guide

1. Turn off the inverter power.
2. Remove the APU front cover of the frame rail unit.
3. Mount the condenser fan relay box assembly to the condensing unit frame using two - 22810, self-tapping screw #8-18 X 0.75". Locate the top of the box with the one existing hole in the frame and create a new second hole into the frame with the second screw.

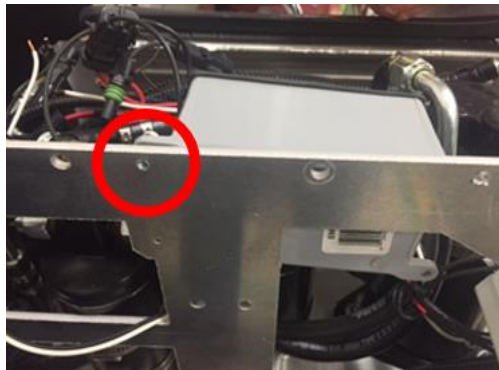

Existing Frame Hole

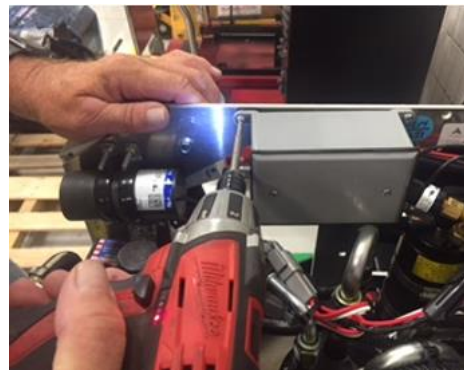

4. Cut the black and white wires on the compressor harness.

