

This side up for marking hole locations



1101 Industrial Drive
Watertown, WI 53094

Tech Support: 1.920.206.9333
techsupport@idlefreesystems.com

P/N 67004 - Template, Volvo In-Closet Evaporator




Pilot hole for 1.75" hole saw



Pilot hole for 3.5" hole saw

Ensure that template is printed to scale.

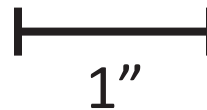

Cut at this line

This edge flush with
cab-fwd. side of

This edge toward back wall of closet